



FP-MOTION MODULE, FP-LIGHT MODULE

Installation Instructions



1. Using a #2 Phillips-head screwdriver, remove the **Pod Cover** from the **FP Speaker Pod** assembly.

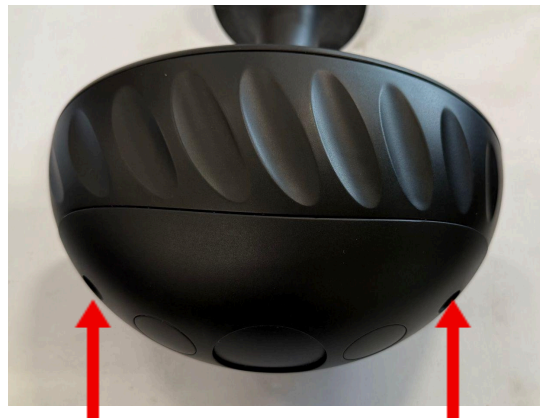


2. Gently remove the necessary **Pod Cover** knock-outs. The center knock-out is used for the **FP-LIGHT MODULE** accessory, while either the left or right knock-out is used for the **FP-MOTION MODULE** accessory.

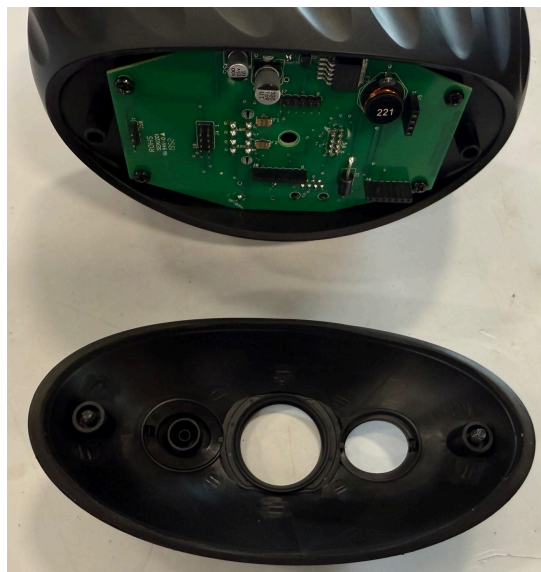

3. Install the **FP-MOTION MODULE** components (**IR Sensor** and **Continuous Audio Relay**) and/or **FP-LIGHT MODULE** component into their respective positions as shown below.
 - The FP speakers ship with (5) **Continuous Audio Jumpers** installed. The jumpers must be removed and replaced with the **Audio Relay** in order for audio to be muted/unmuted by triggering of the **IR Sensor**.

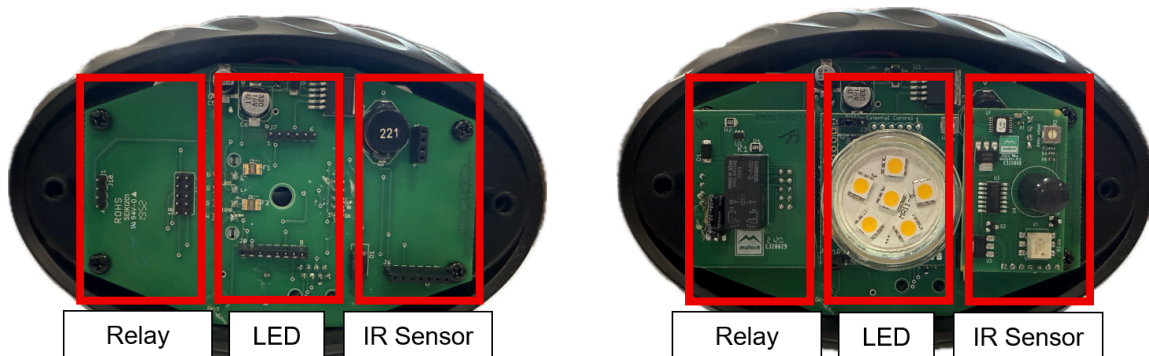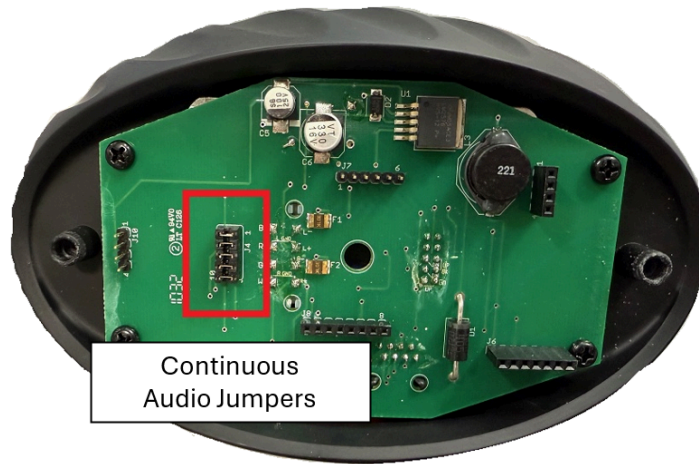

4. Install the **FP-LIGHT MODULE Lamp Baffle/Lens** and/or **FP-MOTION MODULE Aperture** into the appropriate knock-out. The **FP-MOTION MODULE** ships with both a **Narrow Aperture** and a **Wide Aperture**.

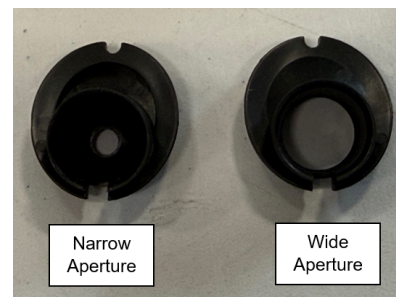

5. Carefully re-install the **Pod Cover** onto the **FP Speaker Pod** assembly. Done!

