

Desono BPAK Installation Guide




C-IC6 or C-IC6LP with network device secured with backpack clips and conduit cover
(shown with an AMP-450BP)

PRODUCT DESCRIPTION

The Desono BPAK Backpack Kit allows the following network boxes to be attached to the top of a Desono C-IC6 or C-IC6LP back can: Tesira AMP-450BP, AMP-450P; Parlé TCM-X, TCM-XA, DCM-X, DCM-XA, DCM-XEX, and Devio DPA-450BP.

Kit Contents

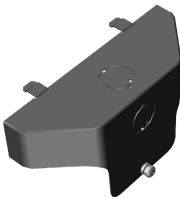

Cover



Clips and M3 screws
(2 each)

Tesira CAT5 Jumper
cable (not shown)



C-IC6




C-IC6LP




Amp or Mic network device
(AMP-450BP shown)

INSTALLATION

1. Attach clips. Installation method is the same for C-IC6LP.

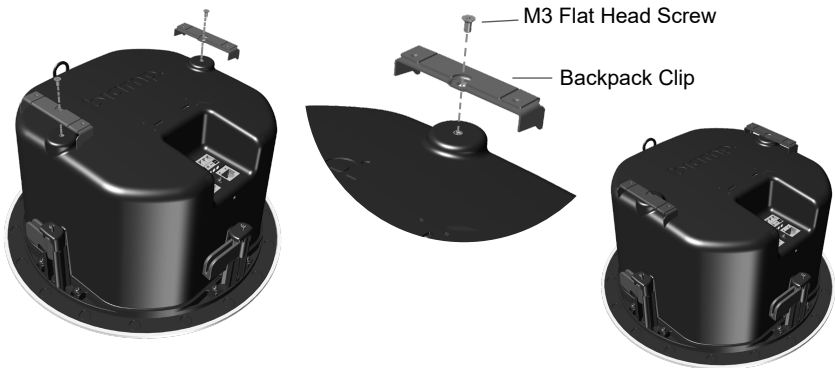

2. Fully slide unit into clips

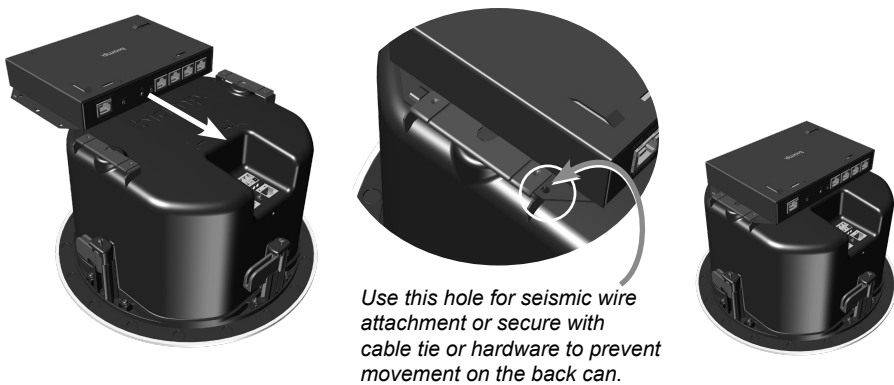

3. A cover is provided for conduit usage, strain relief or ensuring that the device doesn't move backward in the clips. Punch out the cut-out, attach conduit fitting or cable clamp and feed wiring through the opening. Connect wiring per the device instructions. Insert cover tabs into the slots on the box and secure the cover with the thumbscrew.

